



Sensor sensing position setup

Sensor switches


Step 1 Locate the piston rod to the desired position for sensor detection.

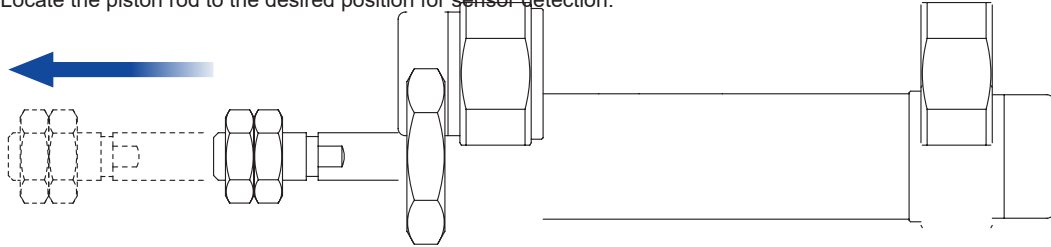


Step 2 Attach the sensor to the cylinder profile and slide it forward. When the indicator is ON, mark the cylinder profile.

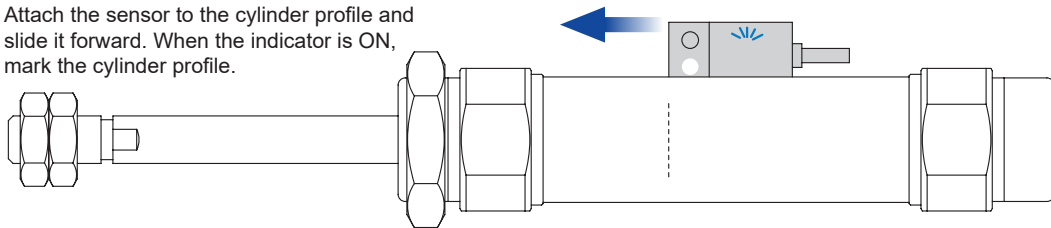

Step 3 Keep sliding the sensor until the indicator is OFF.

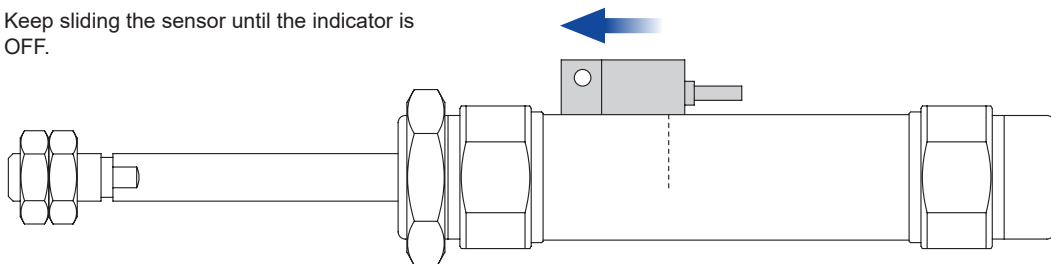

Step 4 Slide the sensor backward until the indicator is ON again. When the indicator is ON, mark the cylinder profile.

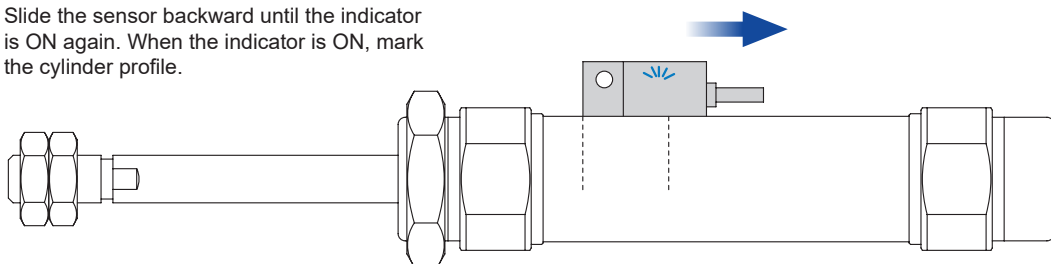

Step 5 Place the sensor between the two marks, and this is the best installation position.

